

 

 








 
 
 
 







 
 

 










 



 






 











 












	Original	Replacement		Original	Replacement
	Power		Power		0
	Timer		Sleep		-/--
	Mute		Mute		Picture
	System		Smart		Sound
	Recall		Back		Zoom
	Display		Info		Nicam / A2
	Timer		Shift + AV		TXT / TV
	TV/AV/PC		AV		Mix
	1		1		Size
	2		2		Cancel
	3		3		Hold
	4		4		Reveal
	5		5		Subpage
	6		6		Index
	7		7		Up / CH+
	8		8		Up / CH+
	9		9		Down / CH-
					Up
					Ch +
					Down





Original		Replacement		Original		Replacement	
	Down / CH-		Ch -				
	Right / Vol+		Right				
	Right / Vol+		Vol +				
	Left / Vol-		Left				
	Left / Vol-		Vol -				
	Menu		Menu				
	Red		Red				
	Menu		Ok				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

