




















Original		Replacement		Original		Replacement	
	Power		Power		Play		OK
	PBC		D.Menu / Top		Right		Right
	Display		Display / Media		Slow		Shift + Play /
	Eject		Eject / Surround		Down		Down
	Subtitle		Subtitle / EQ		Stop		Stop / Hold
	Search		Red / Netflix / Search		I<< Prev.		I<< / Preset-
	Angle		Info / Angle		Next >>I		>>I / Preset+
	Language		Audio / Lang I/II		<< F.R		<< / Tune-
	Setup		Setup / OPT /		F.F >>		F.F >> / Tune+
	Title		Sound / Title		1/All		Green / APP / Repeat
	Menu		Menu / Home		A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size		Vol-		Vol-
	Resume		Back / Return		Vol+		Vol+
	Up		Up		1		1
	Pause		Pause / Step / Freeze		2		2
	Left		Left		3		3
	Play		Play / Slow		Mute		Mute / Dimmer



