
























 
 






 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Home	 Shift +  Home / Menu /
 0	 0
 YouTube	 Shift +  YouTube / Shift + Yellow / YouTube /
 Vol+	 Vol+
 TV	 TV/Radio /
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Source	 RDS AV / Input / RDS
 CH-	 CH- / Page-
 USB	 Shift +  8
 Option	 OPT-TOOLS SETUP / OPT /
 Info	 ANGLE INFO / Info / Angle
 FAV	 PC FAV MARKER / Fav / Marker / PC
 Menu	 HOME MENU / Menu / Home
 EPG	 GUIDE EPG / Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 RETURN BACK / Back / Return
 Exit	 CLEAR EXIT / Exit / Cancel / Clear
 Netflix	 SHIFT +  Red / Netflix / Search





Original	Replacement
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Sleep	Sleep / Timer
Zoom-	Shift + Zoom / Zoom /
Zoom+	Zoom / Size
List	Smart / List
Text	Text / Goto
Sub	Subtitle / EQ
Recall	Shift + Back / Return / Return
Eco	Display / Media
<<<	<<< / Tune-
>>>	>>> / Tune+
I<<	I<< / Preset-
>I	>>I / Preset+
Rec	Rec / Rec Mode

Original	Replacement
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Audio	Audio / Lang I/II

