 

 
 
 

 



 


 
 

 

 



 
 


 
 
 
 
 
 


 



 

 
 


 



 
 


 



 

 

 
 
 

 
 



 
 
 



 
 
 

 
 








Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Shift + 1		 Guide
	 Media		 Mute
	 Shift + 2		 Eject
	 Shift + Options		 Subt
	 Shift + 3		 Menu
	 Exit		 Back
	 Info		 Up
	 1		 Down
	 2		 Right
	 3		 Left
	 4		 Ok
	 5		 <<
	 6		 I<<
	 7		 >>I
	 8		 >>





Original	Replacement	Original	Replacement
 USB Play/Pause	 Shift + Play		
 Slow	 Shift + Pause		
 DVD/CD	 Play		
 Stop	 Stop		
 Still II>	 Pause		
 DVD/CD	 Blue		
 USB	 Yellow		
 AUX	 Red		
 TUNER	 Green		
 Audio	 Dual		
 Dolby	 Options		
 Volume-	 Vol -		
 Volume+	 Vol +		

