 
 


 

 



 
 
 


 
 
 





 

 







 


 
 



 

 
 
 



 
 


 
 
 


 
 

 
 
 
 
 

 




Original	Replacement	Original	Replacement
 Slow	 Right	 -/--	 Guide
 ShowView	 Smart	 Pre-CH	 Pre Ch
 Power	 Power	 Menu	 Menu
 Input	 AV	 V.Menu	 D. Menu
 Display	 Info	 P +	 Ch +
 P.STD	 Format	 P -	 Ch -
 Mute	 Mute	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 2	 2	 << REW	 <<
 3	 3	 Stop	 Stop
 4	 4	 Play	 Play
 5	 5	 >> FF	 >>
 6	 6	 Rec	 Rec
 7	 7	 Eject	 Eject
 8	 8	 Pause / P/S	 Pause
 9	 9	 TRK Up	 >>I
 0	 0	 TRK Down	 I<<



