






 




 


 



 


 
 


 




 










 



 


 










 

 









 
 
 

 


 
 
 
 
 










Original	Replacement	Original	Replacement
 Power	 Power	 Zoom	 Shift + Eject
 Open / Close	 Eject	 Audio	 Dual
 HDMI	 Red	 Repeat	 Text
 Input Select	 AV	 Disc Menu	 D. Menu
 Prog. +	 Ch +	 Top Menu	 Menu
 Prog. -	 Ch -	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Display	 Info
 6	 6	 Return	 Back
 7	 7	 Variable Replay	 Smart
 8	 8	 Variable Skip	 Shift + Smart
 9	 9	 1.3x / 0.8x Play	 Shift + Play
 0	 0	 Time Slip	 Pre Ch
 Clear	 Exit	 <<	 <<





Original	Replacement	Original	Replacement
 Play	 Play		
 >>	 >>		
 Skip l<<	 l<<		
 Stop	 Stop		
 Skip >>l	 >>l		
 Pause	 Pause		
 HDD	 Yellow		
 DVD	 Green		
 Dubbing	 Subt		
 Rec Mode	 SHIFT +  Shift + Rec		
 Rec	 Rec		
 SAT Link	 Media		
 Timer Prog	 Sleep		
 Setup	 Options		

