



Original	Replacement
Power Receiver	Power
BD	Yellow / YouTube / Repeat
DVD	2
DVR / BDR	AV / Input / RDS
HDMI	0
TV/SAT	TV/Radio /
CD	3
HMG	Shift + AV / Input / RDS
ADPT	Eject / Surround
iPod USB	Shift + 8
Tuner	6
Video	4
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Original	Replacement
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down





Original	Replacement	Original	Replacement
Return	Back / Return	3 Tuner	Shift + 3
Repeat	Green / APP / Repeat	Audio DVD	Shift + Audio / Lang I/II
Random	Blue / Prime Video / Random	4 Tuner	Shift + 4
<<<	<<< / Tune-	Signal Sel	Shift + Setup / OPT / Tools
Phase CTRL	Red / Netflix / Search	MCACC	Shift + Blue / Prime
Play	Play / Slow	5 Tuner	5
>>>	>>> / Tune+	6 Tuner	Shift + 6
Status	Exit / Cancel / Clear	Sleep	Sleep / Timer
I<<<	I<<< / Preset-	Disp	Display / Media
Pause	Pause / Step / Freeze	7 Tuner	7
MPX	Zoom / Size	CH Level	Shift + CH+ /
PQLS	Shift + Menu /	8 Tuner	8
Stop	Stop / Hold	A.ATT.	Shift + Yellow / YouTube /
>>>I	>>>I / Preset+	9 Tuner	9
1 Tuner	1	Dimmer	Shift + Mute / Dimmer
S.Retriever	Shift + Text /	CH +	CH+ / Page+
2 Tuner	Shift + 2	D.Access	Shift + D.Menu / Top Menu













 















 

 

 



 

 

 



 











 





Original	Replacement	Original	Replacement
	0 Tuner		Shift + 0
	Class		Shift + Display / Media
	Enter (Class)		Shift + OK
	CH -		CH- / Page-
	Auto / Alc / Direct		Info / Angle
	Stereo		Sound / Title
	Standard		Shift + Smart / List
	Adv. Surr.		Shift + Green / APP /

Original	Replacement





Original	Replacement	Original	Replacement
 Power Source	 Power	 >>	 >>  / Preset+
 DVD	 Shift + 2	 1	 1
 Top Menu	 D.Menu / Top	 2	 2
 Up	 Up	 3	 3
 Left	 Left	 Audio	 Audio / Lang I/II
 Enter	 Shift + OK	 4	 4
 Enter	 OK	 5	 5
 Right	 Right	 6	 6
 Down	 Down	 7	 7
 Return	 Back / Return	 8	 8
 Menu	 Menu / Home	 9	 9
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		





Original		Replacement		Original		Replacement	
	Power Source		Power		3		3
	Tuner		Shift + 6		4		4
	Master Volume		Vol+		5		5
	Master Volume		Vol-		6		6
	Mute		Mute / Dimmer		Disp		Display / Media
	Band		Subtitle / EQ		7		7
	Tune+		>> / Tune+		8		8
	T.Edit		Text / Goto		9		9
	Preset-		I<< / Preset-		D.Access		D.Menu / Top
	Enter		OK		0		0
	Preset+		>>I / Preset+		Class		Shift + Display / Media
	Search		Red / Netflix / Search				
	Tune-		<< / Tune-				
	Menu		Menu / Home				
	MPX		Zoom / Size				
	1		1				
	2		2				

