

 
 

 

 
 
 

 

 

 
 


 



 
 





 



 




















Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Open/Close	 Eject	 Return	 Back
 Band	 Red	 XTS Pro	 Media
 DVD	 Green	 Marker	 Format
 AUX	 Yellow	 Search	 TV/R
 USB	 Blue	 O)))/Audio	 Dual
 Sleep	 Sleep	 Sound	 Shift + Dual
 Dimmer	 D. Menu	 [...] / Subtitle	 Subt
 1	 1	 VSM	 Smart
 2	 2	 Setup	 Options
 3	 3	 Display	 Info
 4	 4	 Up	 Up
 5	 5	 Preset+	 Ch +
 6	 6	 Down	 Down
 7	 7	 Preset-	 Ch -
 8	 8	 Right/Tun.+	 Right
 9	 9	 Left/Tun-	 Left





Original	Replacement	Original	Replacement
 Enter	 Ok	 Mute	 Mute
 Menu	 Menu	 RDS	 AV
 Title	 List		
 <</Scan-	 <<		
 >>/Scan+	 >>		
 Play	 Play		
 I<</Skip-	 I<<		
 >>/I/Skip+	 >>I		
 Pause/Step	 Pause		
 Stop	 Stop		
 Repeat	 Text		
 Repeat A-B	 Shift + Text		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Prog/Memo	 Shift + Sleep		
 Clear	 Exit		
 Zoom	 Shift + Eject		

