

 
















 



 




 




 
 


Original	Replacement	Original	Replacement
	Power		Power
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Hold		Shift + Stop /
	TVG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	<<		<< / Tune-
	Subpage		Eject / Surround
	>>		>> / Tune+

Original	Replacement	Original	Replacement
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	FAV		Fav / Marker / PC
	>>I/Index		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Aspect		Picture / Format
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+





Original	Replacement	Original	Replacement
 Vol-	 Vol-		
 Display	 Display / Media		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 Shift + Guide / EPG / -/--		
 0	 0		
 Recall	 Back / Return		

Original	Replacement

