













 



 











 





 



 



 
 






 

 

 

 



 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Tools	 Setup / OPT /
 Mute	 Mute / Dimmer	 vTuner	 Text / Goto
 Play	 Play / Slow	 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop	 Stop / Hold	 Info	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 >>	 >> / Tune+	 Enter	 OK
 I<<	 I<< / Preset-	 Right	 Right
 >>I	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 3D Sound	 Sound / Title	 Down	 Down
 Dolby PL II	 Audio / Lang I/II	 Return	 Back / Return
 S/W Level	 Subtitle / EQ	 Vol +	 Vol+
 Eject	 Eject / Surround	 Smart Hub	 Smart / List
 Full Screen	 Zoom / Size	 Tuning / CH +	 CH+ / Page+
 Sleep	 Sleep / Timer	 Vol -	 Vol-
 Function	 TV/Radio /	 DSP	 Display / Media
 Disc Menu	 D.Menu / Top	 Tuning / CH -	 CH- / Page-







Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop / Hold
	TV Source		AV / Input / RDS		Play		Play / Slow
	Sleep		Sleep / Timer		Pause		Pause / Step / Freeze
	1		1		Vol+		Vol+
	2		2		Mute		Mute / Dimmer
	3		3		CH+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		CH-		CH- / Page-
	6		6		Menu		Menu / Home
	7		7		Tools		Setup / OPT /
	8		8		Up		Up
	9		9		Info		Info / Angle
	0		0		Left		Left
	I<<		I<< / Preset-		Enter		OK
	>>I		>>I / Preset+		Right		Right
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Down		Down



