








 




Original	Replacement
 Open / Close	 Eject / Surround
 TV Input	 AV / Input / RDS
 TV Power	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 Vol+	 Vol+
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 0	 0

Original	Replacement
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up / Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Smart / List
 Home	 Shift + Menu / Home





Original	Replacement	Original	Replacement
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Display		Display / Media
	Stop		Stop / Hold
	SEN		Info / Angle

Original	Replacement	Original	Replacement

