




































 









 







 


Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Vol+	 Vol+		
 CH+	 CH+ / Page+		
 Vol-	 Vol-		
 Mute	 Mute / Dimmer		
 CH-	 CH- / Page-		
 Source	 AV / Input / RDS		



































































Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Original	Replacement	Original	Replacement
	Red		Red / Netflix / Search
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-





























 

 

 

 























Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Red	 Red / Netflix / Search
 2	 2	 Green	 Green / APP / Repeat
 3	 3	 Yellow	 Yellow / YouTube / Repeat
 4	 4	 Blue	 Blue / Prime Video / Random
 5	 5	 Media	 Display / Media
 6	 6	 Up	 Up
 7	 7	 Guide	 Guide / EPG / -/-
 8	 8	 Left	 Left
 9	 9	 OK/List	 OK
 0	 0	 OK/List	 Shift + Smart / List
 Menu	 Menu / Home	 Right	 Right
 <<	 << / Tune-	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Down	 Down
 >>	 >> / Tune+	 Last	 Back / Return
 Rec	 Rec / Rec Mode	 Vol+	 Vol+
 Stop	 Stop / Hold	 Info	 Info / Angle





Original		Replacement		Original		Replacement	
	Power		Power		OK/List		Smart / List
	1		1		Right		Right
	2		2		Exit		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		Vol+		Vol+
	5		5		Info		Info / Angle
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		Mute		Mute / Dimmer
	0		0		CH-		CH- / Page-
	Menu		Menu / Home				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Up		Up				
	Guide		Guide / EPG / -/--				
	Left		Left				
	OK/List		OK				

