












 























 




















Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Vol+	 Vol+		
 CH+	 CH+ / Page+		
 Vol-	 Vol-		
 Mute	 Mute / Dimmer		
 CH-	 CH- / Page-		
 Source	 AV / Input / RDS		










 





























Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Original	Replacement
 Red	 Red / Netflix / Search
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 i	 Info / Angle
 CH+	 CH+ / Page+
 CH-	 CH- / Page-





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK/List		OK
	OK/List	 + 	Shift + Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Last		Back / Return
	Vol+		Vol+
	Info		Info / Angle





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK/List	 OK

Original	Replacement
 OK/List	 Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-

