



Original	Replacement
 On	 Power
 Off	 Shift + Power
 Up	 Up
 Enter	 Enter
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Keystone	 Shift + Up
 Keystone	 Shift + Down
 Back	 Shift + Left
 Enlarge+	 + / Play
 Forward	 Shift + Right
 Enlarge-	 - / Stop
 Vol+	 Vol + / Page +
 Vol-	 Vol - / Page -
 Freeze	 Freeze / Timer

Original	Replacement
 AV Mute	 Blank / Mute
 Auto Sync	 Auto
 Resize	 Eco / Aspect
 Undo	 Mode
 Input 1	 Source
 Input 2	 Shift + Source
 Input 3	 Comp / Video

