






 

 
 



 

 
 









 
 
 






 







 

 




| Original | | Replacement | | Original | | Replacement | |
|---|-------------|---|---------|---|--------------|---|--------|
|  | Standby/On |  | Power |  | Input/Repeat |  | AV |
|  | Eject |  | Eject |  | Prog Up |  | Ch + |
|  | 1/Slow- |  | 1 |  | Prog Down |  | Ch - |
|  | 2 |  | 2 |  | TRK Up |  | Vol + |
|  | 3/Slow+ |  | 3 |  | TRK Down |  | Vol - |
|  | 4/← Shuttle |  | 4 |  | Menu |  | Menu |
|  | 5 |  | 5 |  | Speed |  | Format |
|  | 6/Shuttle → |  | 6 |  | Audio |  | Dual |
|  | 7/▼ V.Lock |  | 7 |  | Left |  | Left |
|  | 8 |  | 8 |  | Tv/VCR |  | TV/R |
|  | 9/▲ V.Lock |  | 9 |  | Play |  | Play |
|  | 0/F.ADV |  | 0 |  | Pause |  | Pause |
|  | CLR/RST |  | Exit |  | Stop |  | Stop |
|  | Q-Pro |  | Options |  | >> |  | >> |
|  | IPC |  | Smart |  | << |  | << |
|  | Display |  | Info |  | Rec |  | Rec |
|  | Index |  | Guide |  | Up |  | Up |



