





 


 


 
 



 





 
 


 








Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/R	 TV/R
 Sleep	 Sleep
 EPG	 Guide
 Menu	 Menu
 Up / CH+	 Up

Original	Replacement
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Fav	 Pre Ch
 Exit	 Exit
 Red / Find	 Red
 Red / Find	 Shift + TV/R
 Yellow / Disp	 Yellow
 Green / Audio	 Green
 Green / Audio	 Dual
 Blue / Zoom	 Blue
 Blue / Zoom	 Eject





Original	Replacement
Page+ / Mark	Smart
Page- / Jump Mark	Media
Recall	Back
Info	Info
Sub	Subt
DVR Info	+  Shift + Info
TXT	Text
<<	<<
>>	>>
Play	Play
Stop / USB	Stop
I<<	I<<
>>I	>>I
Pause	Pause
Rec	Rec

Original	Replacement

