










 









 





 
 


 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Random	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer	 Repeat	 Green / APP / Repeat
 Timer Play	 Shift + Sleep / Timer	 Stop MD	 Shift + Stop /
 Timer Rec	 Rec / Rec Mode	 Pause MD	 Shift + Pause / Step /
 1	 1	 Play MD	 Shift + Play /
 2	 2	 I<< /<< MD	 I<< / Preset-
 3	 3	 >>/>>I MD	 >>I / Preset+
 4	 4	 CD	 Shift + 3
 5	 5	 Tape	 Shift + 5
 6	 6	 EXT/MD	 AV / Input / RDS
 >10	 Guide / EPG / -/--	 Tuner	 Shift + 6
 7	 7	 Stop	 Stop / Hold
 8	 8	 </II	 Back / Return
 9	 9	 Play	 Play / Slow
 0	 0	 Tune Up	 Shift + >> /
 Program	 TV/Radio /	 Muting	 Mute / Dimmer
 Cancel	 Exit / Cancel / Clear	 I<</<<	 << / Tune-





Original	Replacement	Original	Replacement
 >>/>>	 >> / Tune+		
 Tune Down	 Shift + << /		
 Volume-	 Vol-		
 Volume+	 Vol+		

