











 





 











 





 






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 Red	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 Green	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 Yellow	 Yellow / YouTube / Repeat
 Recall	 Back / Return
 0	 0
 Display	 Display / Media
 Blue	 Blue / Prime Video / Random

Original	Replacement
 P.Mode	 Picture / Format
 Text	 Text / Goto
 CH+	 CH+ / Page+
 CH+	 Up
 Vol-	 Vol-
 Vol-	 Left
 Menu	 Menu / Home
 Vol+	 Vol+
 Vol+	 Right
 CH-	 Down
 CH-	 CH- / Page-
 S.Mode	 Sound / Title
 Mute	 Mute / Dimmer
 Zoom / Sub	 Zoom / Size
 Still	 Pause / Step / Freeze
 Lang	 Audio / Lang I/II
 Video / Index	 Info / Angle





Original	Replacement	Original	Replacement
 S-Video / Hold	 Stop / Hold		
 PC / Size	 Fav / Marker / PC		
 Source / Reveal	 AV / Input / RDS		
 YPbPr / Cancel	 Exit / Cancel / Clear		
 Swap / Mix	 Smart / List		

Original	Replacement

