

 
 



 




 





 

 







 

 



 


















Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 AUDIO	 Red	 Vol-	 Vol -
 CD	 Green	 Auto	 Subt
 AUX	 Yellow	 DSP -	 Shift + Left
 TV	 Blue	 DSP +	 Shift + Right
 VCR	 Shift + Red	 Stereo	 Dual
 DVD	 Shift + Green	 Setup / OSD	 Options
 CABLE	 Shift + Yellow	 Menu / T.Tone	 Menu
 SAT	 Shift + Blue	 Up	 Up
 CH Sel	 TV/R	 Left	 Left
 CH/Level Up	 Ch +	 Enter	 Ok
 CH/Level Down	 Ch -	 Right	 Right
 SPK SET	 Exit	 Down	 Down
 PLII PARA.	 D. Menu	 Display / Sleep	 Info
 Adjust -	 Shift + Down	 Display / Sleep	 Sleep
 Adjust +	 Shift + Up	 Return /	 Back
 Mute	 Mute	 Stop / P.Scan	 Stop





Original	Replacement	Original	Replacement
 << / Tune -	 <<	 AUX Pause	 Shift + Pause
 >> / Tune +	 >>	 AUX Play	 Shift + Play
 I<< / Preset -	 I<<	 AUX Stop	 Shift + Stop
 >>I / Preset +	 >>I	 AUX <<	 Shift + <<
 7CH Dir	 ECO 3D 3D	 AUX >>	 Shift + >>
 1 / Tuner	 1 1	 AUX >>I	 Shift + >>I
 2 / CD	 2 2	 AUX I<<	 Shift + I<<
 3 / AUX	 3 3		
 4 / Tape	 4 4		
 5	 5 5		
 6 / Video 1	 6 6		
 7 / Video 2	 7 7		
 8 / Video 3	 8 8		
 9	 9 9		
 0	 0 0		
 AUX Power /	 SHIFT +  Shift + Power		
 AUX Rec	 SHIFT +  Shift + Rec		





Original	Replacement	Original	Replacement
 AUDIO	 Red	 TV 3	 3
 CD	 Green	 TV 4	 4
 AUX	 Yellow	 TV 5	 5
 TV	 Blue	 TV 6	 6
 VCR	 Shift + Red	 TV 7	 7
 DVD	 Shift + Green	 TV 8	 8
 CABLE	 Shift + Yellow	 TV 9	 9
 SAT	 Shift + Blue	 TV 0	 0
 TV Power	 Power	 CABLE Power	 Shift + Power
 TV CH +	 Ch +	 CABLE CH/Level +	 Shift + Ch +
 TV CH -	 Ch -	 CABLE CH/Level -	 Shift + Ch -
 TV CH Sel.	 Media	 CABLE CH Sel.	 Shift + Smart
 TV Mute	 Mute	 CABLE Mute	 Shift + Mute
 TV Volume +	 Vol +	 CABLE Volume	 Shift + Vol +
 TV Volume -	 Vol -	 CABLE Volume -	 Shift + Vol -
 TV 1	 1	 CABLE 1	 Shift + 1
 TV 2	 2	 CABLE 2	 Shift + 2




 









 













 
 
 
 

 
 

 

 

 

 

 

 





 









 










	Original	Replacement	
	CABLE 3	+	Shift + 3
	CABLE 4	+	Shift + 4
	CABLE 5	+	Shift + 5
	CABLE 6	+	Shift + 6
	CABLE 7	+	Shift + 7
	CABLE 8	+	Shift + 8
	CABLE 9	+	Shift + 9
	CABLE 0	+	Shift + 0

	Original	Replacement





Original	Replacement	Original	Replacement
 AUDIO	 Red	 DVD Right	 Right
 CD	 Green	 DVD Down	 Down
 AUX	 Yellow	 DVD Display	 Info
 TV	 Blue	 DVD Pause	 Pause
 VCR	 Shift + Red	 DVD Play	 Play
 DVD	 Shift + Green	 DVD Stop	 Stop
 SAT	 Shift + Blue	 DVD <<	 <<
 CABLE	 Shift + Yellow	 DVD >>	 >>
 DVD Power	 Power	 DVD I<<	 I<<
 DVD Menu	 Menu	 DVD >>I	 >>I
 DVD Audio Sel.	 Dual	 DVD 1	 1
 DVD Subtitle	 Subt	 DVD 2	 2
 DVD Zoom	 3D	 DVD 3	 3
 DVD OSD /	 Format	 DVD 4	 4
 DVD Up	 Up	 DVD 5	 5
 DVD Left	 Left	 DVD 6	 6
 DVD Enter	 Ok	 DVD 7	 7




 



 

 
 
 





 
 
 

 
 


 
 



 
 

 

 






 

 

 
 


 



 
 


 
 


 
 


 
 



	Original	Replacement		Replacement
	DVD 8		8	
	DVD 9		9	
	DVD 0		0	
	SAT Power	+	Shift + Power	
	SAT CH +	+	Shift + Ch +	
	SAT CH -	+	Shift + Ch -	
	SAT CH Sel.	+	Shift + Media	
	SAT Mute	+	Shift + Mute	
	SAT Volume +	+	Shift + Vol +	
	SAT Volume -	+	Shift + Vol -	
	SAT 1	+	Shift + 1	
	SAT 2	+	Shift + 2	
	SAT 3	+	Shift + 3	
	SAT 4	+	Shift + 4	
	SAT 5	+	Shift + 5	
	SAT 6	+	Shift + 6	
	SAT 7	+	Shift + 7	

	Original	Replacement
	SAT 8	+ Shift + 8
	SAT 9	+ Shift + 9
	SAT 0	+ Shift + 0




 


 

 


 





 



 





 




 


 




Original	Replacement	Original	Replacement
	 Red		 5
	 Green		 6
	 Yellow		 7
	 Blue		 8
	 Shift + Red		 9
	 Shift + Blue		 0
	 Shift + Yellow		 Shift + Power
	 Shift + Green		 Shift + Media
	 Pause		 Shift + Rec
	 Play		 Shift + Play
	 Stop		 Shift + Mute
	 I<<		 Shift + >>
	 >>I		 Shift + <<
	 1		 Shift + Vol -
	 2		 Shift + Vol +
	 3		 Shift + Ch +
	 4		 Shift + Ch -





Original	Replacement	Original	Replacement
 VCR Pause	 +  Shift + Pause		
 VCR Stop	 +  Shift + Stop		
 VCR 1	 +  Shift + 1		
 VCR 2	 +  Shift + 2		
 VCR 3	 +  Shift + 3		
 VCR 4	 +  Shift + 4		
 VCR 5	 +  Shift + 5		
 VCR 6	 +  Shift + 6		
 VCR 7	 +  Shift + 7		
 VCR 8	 +  Shift + 8		
 VCR 9	 +  Shift + 9		
 VCR 0	 +  Shift + 0		

