


 

 





 
 
 

 







 





 







 


 

 

 






 

 



 

 










Original		Replacement		Original		Replacement	
	Power		Power		Pause/Still		Info
	Eject		Eject		Stop		Stop
	1		1		Play		Play
	2		2		i		Menu
	3		3		AV		AV
	4		4		Clear		Exit
	5		5		TV/VCR		TV/R
	6		6		OK		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Lock		Shift + Stop		ez REPEAT		Text
	Rec ITR		Red		CM Skip		Sleep
	LP		Options		ez POWER OFF		Subt
	REW		<<		*		Format
	FF		>>				

