






















 









Original	Replacement
 Power	 Power
 Tv/Rad	 TV/Radio /
 Subtitle	 Subtitle / EQ
 AD/PIP	 Audio / Lang I/II
 [?]	 Zoom / Size
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 Q.View	 Picture / Format
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/--
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Info	 Info / Angle
 T.Opt	 Setup / OPT /
 Settings	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Original		Replacement		Original		Replacement	
	Back		Back / Return				
	Down		Down				
	EXit		Exit / Cancel / Clear				
	Simplink		Display / Media				
	TV/PC	 + 	Shift + Fav / Marker / PC				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow/Bright-		Yellow / YouTube / Repeat				
	Blue/Bright+		Blue / Prime Video / Random				

