



 

 






 



 

 

 
 
 


 

 
 

 



 


 












Original	Replacement
 Power	 Power
 Standby	 +  Shift + Power
 Sleep	 Sleep
 Phono	 +  Shift + Pre Ch
 Tuner	 +  Shift + 1
 CD	 +  Shift + 2
 Multi CH In	 9
 V-AUX	 +  Shift + 3
 CBL/SAT	 +  Shift + 4
 MD/TAPE	 +  Shift + 6
 CD-R	 +  Shift + 5
 DTV	 +  Shift + Guide
 VCR 1	 +  Shift + 9
 VCR 2	 +  Shift + 0
 DVR	 +  Shift + 8
 DVD	 +  Shift + 7
 Volume+	 Vol +

Original	Replacement
 Up / Preset+	 Up
 Volume-	 Vol -
 Mute	 Mute
 Title	 TV/R
 Menu	 Menu
 Left / A/B/C/D/E-	 Left
 Enter	 Ok
 Right /	 Right
 Down / Preset-	 Down
 Pure Direct	 Smart
 Audio	 Dual
 Night	 List
 Straight	 Media
 Return	 Back
 Display	 Info
 STEREO 1	 1
 Music 2	 2






	Original	Replacement		Original	Replacement
	Entertain	3			
	Movie	4			
	THX	5			
	Standard	6			
	EFFECT	7			
	THX	GUIDE			
	Extd. Sur.	PRE-CH			
	<</Freq/Text	<<			
	>>/Eon	>>			
	I<</Mode PTY	I<<			
	>>/PTY Seek	>>I			







Original	Replacement
 Power	 Power
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Preset Up	 Up
 Preset Down	 Down
 Right A/B/C/D/E	 Right
 Left A/B/C/D/E	 Left
 Enter	 Ok
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0	 0
 ENT	 Pre Ch
 Freq/TEXT	 Red
 PTY Seek Start	 Blue
 Eon	 Green
 Mode PTY Seek	 Yellow
 Power V-AUX	 Shift + Power
 Up V-AUX	 Shift + Up
 Down V-AUX	 Shift + Down
 Right V-AUX	 Shift + Right
 Left V-AUX	 Shift + Left
 Enter V-AUX	 Shift + Ok
 Audio V-AUX	 Dual
 Display V-AUX	 Shift + Info
 Return V-AUX	 Shift + Back





Original	Replacement
Menu V-AUX	Menu
Title V-AUX	+  Shift + TV/R
1 V-AUX	+  Shift + 1
2 V-AUX	+  Shift + 2
3 V-AUX	+  Shift + 3
4 V-AUX	+  Shift + 4
5 V-AUX	+  Shift + 5
6 V-AUX	+  Shift + 6
7 V-AUX	+  Shift + 7
8 V-AUX	+  Shift + 8
9 V-AUX	+  Shift + 9
0 V-AUX	+  Shift + 0
+10 V-AUX	+  Shift + Guide
ENT V-AUX	+  Shift + Pre Ch
<< V-AUX	<<
I<< V-AUX	I<<
>>I V-AUX	>>I

Original	Replacement
>> V-AUX	>>
Rec V-AUX	Rec
Stop V-AUX	Stop
Pause V-AUX	Pause
Play V-AUX	Play

