

 

 








 
 









 

 

 

 

 
 
 


 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Remain	 Smart
 DVD	 Blue	 Cancel	 Media
 Tuner	 Green	 I<<	 I<<
 USB	 Yellow	 >>I	 >>I
 AUX	 Red	 <<	 <<
 Open/Close	 Eject	 >>	 >>
 Sleep	 Sleep	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 Step	 Options
 4	 4	 Repeat	 Text
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Mute	 Mute
 8	 8	 Tuning Up	 Ch +
 9	 9	 Tuning Down	 Ch -
 0	 0	 Menu	 Menu





Original		Replacement		Original		Replacement	
	Return		Back				
	Up / Preset Up		Up				
	Down / Preset		Down				
	Right / Seek Up		Right				
	Left / Seek Down		Left				
	Enter		Ok				
	Audio		List				
	Subtitle		Subt				
	Info		Info				
	Exit		Exit				
	Virtual Sound		Dual				
	EQ		3D				
	Zoom/Mo/ST		Shift + Eject				
	Angle/Autoscan		Guide				

