





 










Original	Replacement
 Power	 Power
 ACC On	 AV / Input / RDS
 ACC Off	 Shift + AV / Input / RDS
 CD	 Shift + 3
 CD2	 Shift + Red / Netflix /
 TUNER	 Shift + 6
 PH/AU	 Text / Goto
 SAT	 Shift + 0
 TV	 TV/Radio /
 LV	 Setup / OPT /
 DVD	 Shift + 2
 TAPE	 Shift + 5
 TAPE2	 Blue / Prime Video / Random
 VCR	 Shift + 4
 VCR2	 Yellow / YouTube / Repeat
 Up	 Up
 Info	 Info / Angle

Original	Replacement
 Left	 Left
 Select	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Stop	 Stop / Hold
 I<< Back	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 REW /	 << / Tune-
 FF / CHANNEL+	 >> / Tune+
 +10	 Guide / EPG / -/--
 1	 1
 2	 2
 3	 3
 Mode	 D.Menu / Top
 4	 4





	Original	Replacement		Original	Replacement
	 5	 5			
	 6	 6			
	 Trim	 Sleep / Timer			
	 7	 7			
	 8	 8			
	 9	 9			
	 Level +	 CH+ / Page+			
	 SPKR 1 / AM / Disc	 Red / Netflix / Search			
	 0	 0			
	 SPKR 2 / FM /	 Green / APP / Repeat			
	 Level -	 CH- / Page-			
	 Mute	 Mute / Dimmer			
	 Volume -	 Vol-			
	 Volume +	 Vol+			

