
















































 

 






 
 












Original	Replacement	Original	Replacement
	Power		Power
	[+]		Display / Media
	Mute		Mute / Dimmer
	Tv/AV		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol+
	Vol-		Vol-
	Timer		Sleep / Timer
	1		1
	N		D.Menu / Top
	F		Menu / Home
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0/VCR		0
	0/VCR		Shift + 4
	Red		Red / Netflix / Search
	C		Exit / Cancel / Clear
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Hold		Shift + Stop /
	Yellow		Yellow / YouTube / Repeat
	Index		Info / Angle
	Pause/Step		Pause / Step / Freeze
	Reveal		Smart / List





Original	Replacement	Original	Replacement
 Time Text	 TV/Radio /		
 Play	 Play / Slow		
 Tv/Text	 Text / Goto		
 Stop	 Stop / Hold		
 >>	 >> / Tune+		
 <<	 << / Tune-		
 Rec	 Rec / Rec Mode		
 F/T/B	 Zoom / Size		
 Power VCR	 Shift + Power		
 Programme Up	 CH+ / Page+		
 Programme Down	 CH- / Page-		

Original	Replacement	Original	Replacement

