



Original	Replacement
On / Standby	Power
Input Selector V1	1
Input Selector V2	2
Input Selector V3	3
Input Selector Multi CH	5
Input Selector	6
Input Selector	7
Input Selector Tuner	8
Input Selector CD	9
Dimmer	0
Sleep	Sleep / Timer
Guide/Top	Menu / Home
Muting	Mute / Dimmer
Return	Back / Return
Setup	Eject / Surround
Enter	OK
Up	Up

Original	Replacement
Down	Down
Right	Right
Left	Left
Play	Play / Slow
Rev. Play	Pause / Step / Freeze
Stop	Stop / Hold
<<<	>> / Tune+
>>>	I<<< / Preset-
I<<<	<<< / Tune-
>>>I	>>>I / Preset+
Listening Mode Stereo	Red / Netflix / Search
Listening Mode Surround	Green / APP / Repeat
Listening Mode <	Yellow / YouTube / Repeat
Listening Mode >	Blue / Prime Video / Random
Test Tone/Audio	Audio / Lang I/II
CH Sel/Subtitle	Subtitle / EQ
Level-/Random	TV/Radio /





Original	Replacement
Level+/Repeat	Zoom / Size
Display	Info / Angle
L.Night	Smart / List
Cine FLTR	Display / Media
Input Tv	Shift + AV / Input / RDS
CH/Disc/Album	CH+ / Page+
CH/Disc/Album-	CH- / Page-
Vol+	Vol+
Vol-	Vol-
Power Tv/Standby	Shift + Power
Vol+ Tv	Shift + Vol+
Vol- Tv	Shift + Vol-
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5

Original	Replacement
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
+10 Tv	Shift + Guide / EPG / -/-
Muting/Previous Menu Tv	Shift + Mute / Dimmer
Enter Tv	Shift + OK
Right Tv	Shift + Right
Left Tv	Shift + Left
Setup Tv	D.Menu / Top
Up Tv	Shift + Up
Down Tv	Shift + Down






 

 

 
 



 



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 VCR	 Shift + 4
 +10/10/-/-	 Guide / EPG / -/-
 0/11	 0
 CLR	 Exit / Cancel / Clear
 Top Menu	 D.Menu / Top
 Up	 Up
 Previous Menu/Muting	 Menu / Home

Original	Replacement
 Previous Menu/Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Sound / Title
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-





 



 

 
 








 


 
 
 
 


 
 
Original	Replacement
 Listening Mode >	 Shift + >>  / Preset+
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Display	 Display / Media
 Play Mode VCR	 Picture / Format
 DVD	 Shift + 2
 HDD	 Shift + 7

Original	Replacement












 
 
 
 

 

Original	Replacement
 On / Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/-/-	 Guide / EPG / -/-
 0/11	 0
 12	 Fav / Marker / PC
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-

Original	Replacement
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Display	 Display / Media





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/--	 Guide / EPG / --
 0/11	 0
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Replacement
 <<	 << / Tune-
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+
 Play Mode	 D.Menu / Top
 L.Night	 Sleep / Timer

