

 












 



 











 







 


 
 



 
 
 

 




 



 
 



 



 
 







 

 

 
 
 
 


 
 






Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep
	Mute		Mute		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Freeze		Shift + Media
	3		3		View Mode		Media
	4		4		CH+		Ch +
	5		5		CH-		Ch -
	6		6		Surround		Dual
	7		7		MPX		Format
	8		8		Display		Info
	9		9		Menu		Menu
	0		0		Exit		Exit
	Recall		Pre Ch		Return		Back
	Input		AV		Up		Up
	Tv		TV/R		Down		Down
	PC		Smart		Right		Right
	AV Mode		3D		Left		Left





Original		Replacement		Original	Replacement
	Enter		Ok		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	[≡]		Text		
	[...]		Subt		
	USB		Options		
	Stop		Stop		
	[≡◆]		List		
	[≡+]		Guide		
	<<		<<		
	>>		>>		
	[≡?]		D. Menu		
	[≡o]		Eject		
	Pause		Pause		
	Play		Play		

