



Original		Replacement		Original		Replacement	
	Power		Power		Input		AV
	Mute		Mute		Info		Info
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		FAV		Pre Ch
	-/-		Guide		P.Mode		Shift + Format
	Recall		Back		S.Mode		Shift + Dual
	Sleep		Sleep		CH+		Ch +
	Audio		Dual		CH-		Ch -
	Aspect		3D		Red		Red





Original	Replacement	Original	Replacement
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Home		Smart
	Setup		Options
	Mouse		D. Menu
	EPG		Shift + Guide
	Text		Text
	Stop/Reveal		Stop
	Play/Pause / Mix		Play
	Play/Pause / Mix		Pause
	Index		List
	<</Hold		<<
	>>/Subpage		>>
	I<< / Size		I<<
	I<< / Size		Format
	>>I/Cancel		>>I
	Tv/Radio		TV/R
	Rec		Rec
	T-Shift		Media
	Sub-T		Subt

