




 
 
 





 
 

 


Original	Replacement
 Power	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Nicam / A2	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall	 Pre Ch
 FAV	 Shift + Pre Ch
 Fav +	 Shift + Up
 Fav -	 Shift + Down
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Source	 AV
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Exit	 Exit





Original		Replacement		Original		Replacement	
	Vol +		Vol +		Rec		Shift + Text
	Vol -		Vol -		Timeshift		Smart
	Media		Media		A-B		Back
	TV / Radio		TV/R		EPG		Format
	CH +		Ch +				
	CH -		Ch -				
	Play/Pause / Text		Play				
	Play/Pause / Text		Pause				
	Play/Pause / Text		Text				
	<< / Size		<<				
	<< / Size		3D				
	>> / Reveal		>>				
	Stop / Hold		Stop				
	I<< / Index		I<<				
	>>I / Subpage		>>I				
	Cancel		Shift + Exit				
	Subtitle		Subt				

