


































 





























 



 
















Original	Replacement	Original	Replacement
	Power		Power
	[i+]/Timer		Info / Angle
	[i+]/Timer		Sleep / Timer
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	PC		Shift + Fav / Marker / PC
	Screen Split		Shift + Red / Netflix /
	Screen Swap		Shift + Green / APP /
	PIP Swap		Shift + Yellow / YouTube /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH Return		Guide / EPG / -/--
	0		0
	CH Enter		Fav / Marker / PC
	P+		CH+ / Page+
	I-II		Audio / Lang I/II
	Vol+		Vol+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Return		Back / Return
	Up		Up
	Home Menu		Menu / Home
	Left		Left
	Enter		OK





Original	Replacement
 Right	 Right
 Down	 Down
 AV Selection	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [ I+ ]/[ ≡ ♦ ]	 Setup / OPT /
 [ <> ]	 Picture / Format
 [ ... ]	 Subtitle / EQ
 [ ≡ ? ]	 D.Menu / Top
 [ ≡ i ]	 Display / Media
 [ ≡ ]	 Text / Goto

Original	Replacement

