




 
 
 

 















 



 






 
 




 





Original	Replacement	Original	Replacement
 System	 Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 CD/HDD/USB/N	 Smart	 Setup	 Options
 Function	 D. Menu	 Menu	 Menu
 SDB/Tone	 Media	 Up	 Up
 Prog	 Shift + Sleep	 Left	 Left
 Random	 TV/R	 Push/Enter	 Ok
 Repeat	 Text	 Right	 Right
 Play/Pause HDD	 Play	 Down	 Down
 Play/Pause CD	 Pause	 Time/Display	 Info
 Stop/Band	 Stop	 Back	 Back
 I<</CH-	 I<<	 Music Search	 Dual
 >>/CH+	 >>I	 < Tape	 Ch -
 <</Tu-	 <<	 Tape >	 Ch +
 >>/TU+	 >>	 Stop MD/Tape	 Shift + Stop
 Play/Pause iPod	 Blue	 Play/Pause MD	 Shift + Pause
 Mute	 Mute	 Tape	 Shift + Smart





	Original	Replacement		Original	Replacement	
	MD	SHIFT + MEDIA	Shift + Media		REC MODE	Rec
	Genre	B	Green		1	1
	Artist	C	Yellow		2	2
	Album	SHIFT + GUIDE	Shift + Guide		3	3
	Track	ZOOM	Eject		4	4
	P.List	A	Red		5	5
	Line 1/2	TIMER AV	AV		6	6
	Dimmer	PICTURE FORMAT	Format		7	7
	Folder	SHIFT + DISPLAY INFO	Shift + Info		8	8
	Clock	SHIFT + TIMER AV	Shift + AV		9	9
	Up	SHIFT + Up arrow	Shift + Up		0	0
	Left	SHIFT + Left arrow	Shift + Left		GUIDE	Guide
	Enter	SHIFT + OK	Shift + Ok		CLEAR EXIT	Exit
	Right	SHIFT + Right arrow	Shift + Right		FAV PRE-CH	Pre Ch
	Down	SHIFT + Down arrow	Shift + Down			
	Back	SHIFT + RETURN BACK	Shift + Back			
	Edit	AD SUBT	Subt			

