
 

























 








Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Display	 Info
 P.Mode	 Format

Original	Replacement
 Text	 Text
 CH+	 Ch +
 CH+	 Up
 CH-	 Ch -
 CH-	 Down
 Vol+	 Vol +
 Vol+	 Right
 Vol-	 Vol -
 Vol-	 Left
 Menu	 Menu
 Menu	 Ok
 S.Mode	 Shift + Dual
 Mute	 Mute
 Still	 Pause
 Zoom	 Eject
 Lang	 Dual
 Video	 Shift + 1





Original	Replacement	Original	Replacement
[S-Video]	S-Video	[SHIFT] + [2]	Shift + 2
[PC]	PC	[SHIFT] + [3]	Shift + 3
[Recall]	Recall	[RETURN]	Back
[Time]	Time	[TIMER]	AV
[YPbPr]	YPbPr	[HOME]	Smart
[YCbCr]	YCbCr	[APP]	Media

