



 



 


 






 






 
 

 
 





 







 








 



 





 
 
 
 
 
 

 





 


 
 

 

 

 
 
 
 


 










Original		Replacement		Original		Replacement	
	Power		Power		Volume-		Vol -
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	>10		Guide				
	Enter1		Pre Ch				
	Tv CH+		Ch +				
	Tv CH-		Ch -				
	DVD Top Menu		Smart				
	Volume+		Vol +				





Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Sleep	 Sleep	 5	 5
 Muting	 Mute	 6	 6
 Tuner/Band	 Green	 7	 7
 Open/Close	 Eject	 8	 8
 Auto Format	 Format	 9	 9
 Auto Format	 AV	 0	 0
 DSGX	 List	 >10	 Guide
 Tuner Menu	 Menu	 Enter1	 Pre Ch
 Play Mode	 Yellow	 Audio	 Dual
 Repeat	 Text	 Angle	 Red
 FM Mode	 Shift + TV/R	 Subtitle	 Subt
 Night Mode	 Blue	 I<</Preset-	 I<<
 Function	 3D	 >>I/Preset+	 >>I
 1	 1	 <</Tuning-	 <<
 2	 2	 >>/Tuning+/Slow	 >>
 3	 3	 Play	 Play





Original	Replacement	Original	Replacement
	Pause		Pause
	Stop		Stop
	DVD Top Menu		Smart
	DVD Menu		D. Menu
	Display		Info
	Volume+		Vol +
	Volume-		Vol -
	Return		Back
	DVD Display		Shift + Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Tv/Video		TV/R
	DVD Setup		Options
	Clear		Exit
			Dimmer
			Media

