

 





 

 



 





 

 



 






 






 







 







 

















 

 

 











Original	Replacement	Original	Replacement
 Power	 Power	 REV	 << / Tune-
 Disc Side A/B	 D.Menu / Top	 Pause	 Pause / Step / Freeze
 Open/Close	 Eject / Surround	 Play	 Play / Slow
 Audio	 Audio / Lang I/II	 FWD	 >> / Tune+
 Subtitle	 Subtitle / EQ	 Stop	 Stop / Hold
 Angle	 Info / Angle	 < Step	 CH- / Page-
 Display	 Display / Media	 Step >	 CH+ / Page+
 Menu	 Menu / Home	 1	 1
 Title	 Sound / Title	 2	 2
 Up	 Up	 3	 3
 Return	 Back / Return	 Clear	 Exit / Cancel / Clear
 Left	 Left	 4	 4
 Enter	 OK	 5	 5
 Right	 Right	 6	 6
 Prev	 << / Preset-	 +10	 Guide / EPG / -/--
 Down	 Down	 7	 7
 Next	 >> / Preset+	 8	 8







 





 









 



 



 





 





 



 

 















 







Original		Replacement	
	9		9
	0		0
	Program		TV/Radio /
	CHP/Time		Setup / OPT /
	Mode		Picture / Format
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Last Memo		Fav / Marker / PC
	Condition		Zoom / Size

Original		Replacement	







 

 

 









Original	Replacement	Original	Replacement
	Power		Power
	Disc Side A/B		D.Menu / Top
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Display		Display / Media
	Menu		Menu / Home
	Title		Sound / Title
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Prev		I<< / Preset-
	Down		Down
	Next		>>I / Preset+
	REV		<< / Tune-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	FWD		>> / Tune+
	Stop		Stop / Hold
	<II Step		CH- / Page-
	Step II>		CH+ / Page+
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8





Original	Replacement
 9	 9
 0	 0
 Program	 TV/Radio /
 CHP/Time	 Setup / OPT /
 Mode	 Picture / Format
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Last Memo	 Fav / Marker / PC
 Condition	 Zoom / Size

Original	Replacement

