 
 
 

 





 
 



 









 


 









Original	Replacement	Original	Replacement
	★ Fav / Marker / PC		>> / Tune+
	Power		Menu / Home
	Mute / Dimmer		Back / Return
	Green / APP / Repeat		Up
	Yellow / YouTube / Repeat		Left
	Blue / Prime Video / Random		OK
	Red / Netflix / Search		Right
	Rec / Rec Mode		Down
	Shift + Green / APP /		Info / Angle
	Sound / Title		Vol+
	Setup / OPT /		D.Menu / Top
	Shift + 1		Play / Slow
	Smart / List		Vol-
	Display / Media		Pause / Step / Freeze
	I<< / Preset-		CH+ / Page+
	>>I / Preset+		Stop / Hold
	<< / Tune-		1



