







 

 
 


 









 
 




	Original	Replacement	Original	Replacement
	Timer	 AV		
	Timer	 Up		
	Timer	 Sleep		
	1	 1		
	1	 Left		
	1	 Power		
	0	 0		
	0	 Ok		
	0	 Shift + Power		
	↻ Swing	 Smart		
	↻ Swing	 Right		
	~ Media	 Media		
	~ Media	 Down		

