



Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P.Mode	 Format
 8	 8	 S.Mode	 Dual
 9	 9	 CH+	 Ch +
 0	 0	 CH-	 Ch -
 -	 Guide	 Input	 Shift + AV
 Recall	 Back	 Fav / Angle	 Pre Ch
 Source	 AV	 Zoom	 Eject
 Display	 Info	 Sleep	 Sleep
 Up	 Up	 Red	 Red





Original	Replacement	Original	Replacement
Green / 3D	Green		
Green / 3D	3D		
Yellow	Yellow		
Blue	Blue		
Play / Pause	Play		
Play / Pause	Pause		
FR	<<		
FF	>>		
Stop	Stop		
Prev	I<<		
Next	>>I		
Media	Media		
Keyboard	Text		
PC	D. Menu		
Refresh	List		
Search	TV/R		
Home	Smart		

