 
 


































| Original   | Replacement   |
|--|---|
|  Power      |  Power                       |
|  Input      |  AV / Input / RDS            |
|  Nicam / A2 |  Shift + Audio / Lang I/II   |
|  Aspect     |  Zoom / Size                 |
|  P.Mode     |  Picture / Format            |
|  S.Mode     |  Sound / Title               |
|  1          |  1                           |
|  2          |  2                           |
|  3          |  3                           |
|  4          |  4                           |
|  5         |  5                          |
|  6        |  6                         |
|  7        |  7                         |
|  8        |  8                         |
|  9        |  9                         |
|  --/      |  Shift + Guide / EPG / --/ |
|  0        |  0                         |

| Original   | Replacement   |
|--|---|
|  Recall     |  Back / Return               |
|  FAV        |  Fav / Marker / PC           |
|  Freeze     |  Shift + Pause / Step /      |
|  TV / Radio |  TV/Radio /                  |
|  Red        |  Red / Netflix / Search      |
|  Green      |  Green / APP / Repeat        |
|  Yellow     |  Yellow / YouTube / Repeat   |
|  Blue       |  Blue / Prime Video / Random |
|  Sleep      |  Sleep / Timer               |
|  Up         |  Up                          |
|  EPG       |  Guide / EPG / --/          |
|  Left     |  Left                      |
|  Enter    |  OK                        |
|  Right    |  Right                     |
|  Menu     |  Menu / Home               |
|  Down     |  Down                      |
|  Exit     |  Exit / Cancel / Clear     |




 
 
































| Original          | Replacement           |
|-------------------|-----------------------|
| Vol+              | Vol+                  |
| Display           | Info / Angle          |
| CH+               | CH+ / Page+           |
| Vol-              | Vol-                  |
| Mute              | Mute / Dimmer         |
| CH-               | CH- / Page-           |
| Play/Pause / Hold | Play / Slow           |
| Play/Pause / Hold | Shift + Stop /        |
| Play/Pause / Hold | Pause / Step / Freeze |
| << / Reveal       | << / Tune-            |
| >> / Size         | >> / Tune+            |
| Stop / Index      | Stop / Hold           |
| I<<               | I<< / Preset-         |
| >>I / S.Page      | >>I / Preset+         |
| TTX               | Text / Goto           |
| T.Shift           | Setup / OPT /         |
| Audio             | Audio / Lang I/II     |

| Original   | Replacement    |
|------------|----------------|
| Subtitle   | Subtitle / EQ  |
| Rec / Auto | Rec / Rec Mode |
| PVR        | Smart / List   |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |
|            |                |












| Original   | Replacement  |
|--|--|
|  Power      |  Power                        |
|  Input      |  AV / Input / RDS             |
|  Nicam / A2 |  Shift + Audio / Lang I/II   |
|  Aspect     |  Shift + Picture / Format    |
|  P.Mode     |  Picture / Format             |
|  S.Mode     |  Sound / Title                |
|  1          |  1                            |
|  2          |  2                            |
|  3          |  3                            |
|  4          |  4                            |
|  5         |  5                           |
|  6        |  6                          |
|  7        |  7                          |
|  8        |  8                          |
|  9        |  9                          |
|  --/      |  Shift + Guide / EPG / --/ |
|  0        |  0                          |

| Original   | Replacement   |
|--|---|
|  Recall     |  Back / Return               |
|  FAV        |  Fav / Marker / PC           |
|  Freeze     |  Shift + Pause / Step /      |
|  TV / Radio |  TV/Radio /                  |
|  Red        |  Red / Netflix / Search      |
|  Green      |  Green / APP / Repeat        |
|  Yellow     |  Yellow / YouTube / Repeat   |
|  Blue       |  Blue / Prime Video / Random |
|  Sleep      |  Sleep / Timer               |
|  Up         |  Up                          |
|  EPG       |  Guide / EPG / --/          |
|  Left     |  Left                      |
|  Enter    |  OK                        |
|  Right    |  Right                     |
|  Menu     |  Menu / Home               |
|  Down     |  Down                      |
|  Exit     |  Exit / Cancel / Clear     |





| Original  |                   | Replacement   |                       | Original  |            | Replacement   |                |
|---|-------------------|---|-----------------------|---|------------|---|----------------|
|    | Vol+              |    | Vol+                  |  | Subtitle   |  | Subtitle / EQ  |
|    | Display / i       |    | Display / Media       |  | Rec / Auto |  | Rec / Rec Mode |
|    | CH+               |    | CH+ / Page+           |  | PVR        |  | Smart / List   |
|    | Vol-              |    | Vol-                  |   |            |   |                |
|    | Mute              |    | Mute / Dimmer         |   |            |   |                |
|    | CH-               |    | CH- / Page-           |   |            |   |                |
|    | Play/Pause / Hold |    | Play / Slow           |   |            |   |                |
|    | Play/Pause / Hold |    | Shift + Stop /        |   |            |   |                |
|    | Play/Pause / Hold |    | Pause / Step / Freeze |   |            |   |                |
|   | << / Reveal       |   | << / Tune-            |   |            |   |                |
|  | >> / Size         |  | >> / Tune+            |   |            |   |                |
|  | Stop / Index      |  | Stop / Hold           |   |            |   |                |
|  | I<<               |  | I<< / Preset-         |   |            |   |                |
|  | >>I / S.Page      |  | >>I / Preset+         |   |            |   |                |
|  | TTX               |  | Text / Goto           |   |            |   |                |
|  | T.Shift           |  | D.Menu / Top          |   |            |   |                |
|  | Audio             |  | Audio / Lang I/II     |   |            |   |                |

