



Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info
 Mute	 Mute	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Text	 Text
 3	 3	 EPG	 Guide
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 <<	 <<
 0	 0	 >>	 >>
 Timeshift	 Sleep	 Stop	 Stop
 Recall	 Back	 Play	 Play
 Mark	 Options	 Pause	 Pause
 Tv/Radio	 TV/R	 Rec	 Rec
 Source	 AV	 I<<	 I<<





Original	Replacement	Original	Replacement
 >>I	 >>I		
 Audio/Lang	 Dual		
 Page Up	 Shift + Ch +		
 Page Down	 Shift + Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 CH+	 Ch +		
 CH-	 Ch -		
 HDMI	 Media		
 Subtitle	 Subt		
 VCR	 Smart		
 Auto/Goto	 3D		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

