



| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Sleep |  Sleep / Timer |  Preset Up |  >> / Preset+ |
|  Receiver |  Smart / List |  Tuning Up |  >> / Tune+ |
|  HDMI 1 |  1 |  Info |  Info / Angle |
|  HDMI 2 |  2 |  Memory |  Display / Media |
|  HDMI 3 |  3 |  Preset Down |  << / Preset- |
|  HDMI 4 |  4 |  Tuning Down |  << / Tune- |
|  AV 1 |  5 |  Movie |  Subtitle / EQ |
|  AV 2 |  6 |  Music |  Sound / Title |
|  AV 3 |  7 |  Sur Decode |  D.Menu / Top |
|  AV 4 |  8 |  Straight |  Text / Goto |
|  AV 5 |  9 |  Enhancer |  Zoom / Size |
|  Audio 1 |  Guide / EPG / -/-- |  BD/DVD |  Green / APP / Repeat |
|  Audio 2 |  0 |  TV |  Fav / Marker / PC |
|  V-AUX |  AV / Input / RDS |  CD |  Yellow / YouTube / Repeat |
|  Mode |  Picture / Format |  Radio |  TV/Radio / |
|  FM |  Blue / Prime Video / Random |  Setup |  Setup / OPT / |
|  AM |  Red / Netflix / Search |  Up |  Up |





| Original | Replacement |
|--|---|
|  Option |  Shift + Setup / OPT / Tools |
|  Vol+ |  Vol+ |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Vol- |  Vol- |
|  Return |  Back / Return |
|  Down |  Down |
|  Mute |  Mute / Dimmer |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

