


 

 
 








 







 
 

 
 
 
 








Original	Replacement
	Power
	TV/R
	Quick Menu
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	i
	Guide
	Vol+
	Vol-

Original	Replacement
	Mute
	CH+ / Page+
	CH- / Page-
	Menu / Home
	Exit / Cancel / Clear
	Up
	Down
	Right
	Left
	OK
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Stop / Hold
	Play / Slow



