














































 














Original	Replacement	Original	Replacement
 Power	 Power	 Play/Pause	 Play / Slow
 Sleep	 Sleep / Timer	 Play/Pause	 Pause / Step / Freeze
 Info	 Info / Angle	 Play/Pause	 Down
 Function	 Smart / List	 Folder+ / Preset+	 CH+ / Page+
 LG EQ	 Audio / Lang I/II	 Folder- / Preset-	 CH- / Page-
 EQ	 Subtitle / EQ	 Vol+	 Vol+
 Repeat /	 Green / APP / Repeat	 Vol-	 Vol-
 Repeat /	 Blue / Prime Video / Random	 Program /	 Zoom / Size
 I<< / Tun-	 I<< / Preset-	 Mute	 Mute / Dimmer
 I<< / Tun-	 << / Tune-	 RDS	 AV / Input / RDS
 >> / Tun+	 >> / Preset+	 PTY	 TV/Radio /
 >> / Tun+	 >> / Tune+	 Rec	 Rec / Rec Mode
 >> / Tun+	 Right		
 I<< / Tun-	 Left		
 Stop	 Stop / Hold		
 Stop	 OK		
 Repeat /	 Up		

Random

