



 







 



 

 

 

 












 



Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Audio / Nicam/A2	 Audio / Lang I/II
 Aspect	 Zoom / Size
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/--	 Shift + Guide / EPG / --/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Freeze	 Shift + Pause / Step /
 TV/Radio / DVD Title	 TV/Radio /
 TV/Radio / DVD Title	 Shift + Sound / Title
 Red / Angle	 Red / Netflix / Search
 Red / Angle	 Shift + Info / Angle
 Green / Language	 Green / APP / Repeat
 Green / Language	 Shift + Audio / Lang I/II
 Yellow / DVD	 Yellow / YouTube / Repeat
 Yellow / DVD	 Setup / OPT /
 Blue / DVD	 Blue / Prime Video / Random
 Blue / DVD	 D.Menu / Top
 Sleep	 Sleep / Timer
 Up	 Up
 EPG	 Guide / EPG / --/--
 Left	 Left





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement
