















 

















 














































| Original | | Replacement | | Original | | Replacement | |
|---|------------|---|------------------------|---|--------|---|-----------------------|
|  | Power |  | Power |  | 6 |  | 6 |
|  | Open/Close |  | Eject / Surround |  | 7 |  | 7 |
|  | V.Mode |  | Picture / Format |  | 8 |  | 8 |
|  | OSD |  | Display / Media |  | 9 |  | 9 |
|  | P/N |  | AV / Input / RDS |  | 0 |  | 0 |
|  | Program |  | TV/Radio / |  | 10+ |  | Guide / EPG / -/-- |
|  | Menu |  | Menu / Home |  | Up |  | Up |
|  | Title |  | Sound / Title |  | Down |  | Down |
|  | Subtitle |  | Subtitle / EQ |  | Right |  | Right |
|  | Angle |  | Info / Angle |  | Left |  | Left |
|  | Search |  | Red / Netflix / Search |  | Enter |  | OK |
|  | Setup |  | Setup / OPT / |  | PBC |  | Text / Goto |
|  | 1 |  | 1 |  | Return |  | Back / Return |
|  | 2 |  | 2 |  | Zoom |  | Zoom / Size |
|  | 3 |  | 3 |  | Play |  | Play / Slow |
|  | 4 |  | 4 |  | Pause |  | Pause / Step / Freeze |
|  | 5 |  | 5 |  | Stop |  | Stop / Hold |





| | Original | Replacement |
|---|----------|--|
|  | << |  << / Tune- |
|  | >> |  >> / Tune+ |
|  | I<< |  I<< / Preset- |
|  | >>I |  >>I / Preset+ |
|  | Audio |  Audio / Lang I/II |
|  | R/L |  D.Menu / Top |
|  | Slow |  Shift + Play / |
|  | Resume |  Rec / Rec Mode |
|  | Reset |  Exit / Cancel / Clear |
|  | Step |  Shift + Pause / Step / |
|  | A-B |  Yellow / YouTube / Repeat |
|  | DVD/USB |  Smart / List |
|  | Repeat |  Green / APP / Repeat |
|  | Mute |  Mute / Dimmer |
|  | Vol+ |  Vol+ |
|  | Vol- |  Vol- |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

