



Original	Replacement
Power	Power
Open/Close	Eject / Surround
V.Mode	Picture / Format
OSD	Display / Media
P/N	AV / Input / RDS
Program	TV/Radio /
Menu	Menu / Home
Title	Sound / Title
Subtitle	Subtitle / EQ
Angle	Info / Angle
Goto	Red / Netflix / Search
Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5

Original	Replacement
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
PBC	Text / Goto
Return	Back / Return
Zoom	Zoom / Size
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold





Original		Replacement		Original		Replacement	
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Audio		Audio / Lang I/II				
	R/L		D.Menu / Top				
	Slow		Shift + Play /				
	Resume		Rec / Rec Mode				
	Reset		Exit / Cancel / Clear				
	Step		Shift + Pause / Step /				
	A-B		Yellow / YouTube / Repeat				
	DVD/USB		Smart / List				
	Repeat		Green / APP / Repeat				
	Mute		Mute / Dimmer				
	Vol+		Vol+				
	Vol-		Vol-				

