









 

 





 

 
 





 












 


 













 











| Original | Replacement |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Bass Bost |  Subtitle / EQ |
|  Display |  Display / Media |
|  Power |  Power |
|  Tune Memory N. 1 |  1 |
|  Tune Memory N. 2 |  2 |
|  Tune Memory N. 3 |  3 |
|  Tune Memory N. 4 |  4 |
|  Tune Memory N. 5 |  5 |
|  Tune Memory N. 6 |  6 |
|  FM |  Shift + 6 |
|  AM |  Shift + 1 |
|  AUDIO IN |  Shift + 2 |
|  CD |  Shift + 3 |
|  USB |  8 |
|  USB |  Shift + 8 |
|  Tuner Memory |  Smart / List |
|  Clear |  Exit / Cancel / Clear |

| Original | Replacement |
|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Up / Folder+ |  Up |
|  Play Mode / Tuning Mode |  Setup / OPT / |
|  Repeat / FM Mode |  Green / APP / Repeat |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Volume+ |  Vol+ |
|  Return |  Back / Return |
|  Down / Folder- |  Down |
|  Timer Menu |  Menu / Home |
|  Volume- |  Vol- |
|  I<< / - |  I<< / Preset- |
|  Pause |  Pause / Step / Freeze |
|  >>I / + |  >>I / Preset+ |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |





| Original | Replacement | Original | Replacement |
|----------|---------------|----------|-------------|
| Sleep | Sleep / Timer | | |
| Stop | Stop / Hold | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

