



























 





Original	Replacement	Original	Replacement
	Power		Red / Netflix / Search
	1		Green / APP / Repeat
	2		Yellow / YouTube / Repeat
	3		Blue / Prime Video / Random
	4		Guide / EPG / -/-
	5		Smart / List
	6		AV / Input / RDS
	7		Menu / Home
	8		Display / Media
	9		Up
	0		Down
	Info / Angle		Right
	Text / Goto		Left
	Shift + Yellow / YouTube /		OK
	Shift + Red / Netflix /		Back / Return
	Shift + Green / APP /		TV/Radio /
	Shift + Blue / Prime Video / Random		Shift + Menu / Home





	Original	Replacement	Original	Replacement
	Vol+	 Vol+		
	Vol-	 Vol-		
	Mute	 Mute / Dimmer		
	Recall	 Fav / Marker / PC		
	CH+	 CH+ / Page+		
	CH-	 CH- / Page-		
	Audio	 Audio / Lang I/II		
	[...]	 Subtitle / EQ		
	Help	 Zoom / Size		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	Exit	 Exit / Cancel / Clear		

