
 


 



 




 


 


 
 

 


 
 

 
 
 

 

 

 

 



 

 



 

 



 









 

 


 

 

 





Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Input TV	 AV / Input / RDS
 Power TV	 Shift + Power
 Program	 TV/Radio /
 1	 1
 2	 2
 Repeat	 Green / APP / Repeat
 Function+	 CH+ / Page+
 3	 3
 EQ	 Shift + Subtitle / EQ
 4	 4
 DSGX	 Sound / Title
 5	 5
 Function-	 CH- / Page-
 6	 6
 Zoom	 Zoom / Size

Original	Replacement
 7	 7
 Dimmer	 Shift + Dimmer / Dimmer
 8	 8
 Time	 Shift + Sleep / Timer
 9	 9
 0	 0
 0/Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 DVD Top Menu	 Menu / Home
 DVD Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Display	 Display / Media
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Up	 Up





Original		Replacement		Original		Replacement	
	Down		Down				
	Right		Right				
	Left		Left				
	OK		OK				
	I<</Preset-		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I/Preset+		>>I / Preset+				
	<</Tuning-		<< / Tune-				
	Play		Play / Slow				
	>>/Tuning+		>> / Tune+				
	Stop		Stop / Hold				

