

 





 

 

 

 

 

 

 

 

 

 

 

 

 





Original	Replacement
 On	 Power
 Off	 Shift + Power
 Magicnet	 Picture / Format
 MDC	 Audio / Lang I/II
 Lock	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +100/DEL/-/	 Guide / EPG / -/-
 [=o]/Enter/Pre-CH	 Fav / Marker / PC

Original	Replacement
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 TTX/MIX	 Text / Goto
 [=?]/Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Red/Auto	 Red / Netflix / Search
 Green/M/B/P.Mod	 Green / APP / Repeat





Original	Replacement	Original	Replacement
Yellow/Sound/S.M	Yellow / YouTube / Repeat		
Blue/Still	Blue / Prime Video / Random		
FM Radio	TV/Radio /		
P.Size	Zoom / Size		
(O)/SRS	Sleep / Timer		
I/II/Dual MTS	Sound / Title		
[=+]/PIP	D.Menu / Top		
[=◇]/Source	Shift + AV / Input / RDS		
Swap	Eject / Surround		
[=x]/Size	Shift + Zoom /		
<<	<< / Tune-		
Stop	Stop / Hold		
Play/Pause	Play / Slow		
>>	>> / Tune+		

Original	Replacement

