









| Original   | Replacement   |
|--|---|
|  Setup                  |  Setup / OPT /     |
|  Key Lock               |  Text / Goto       |
|  Open / Close           |  Eject / Surround  |
|  Standby On/Off         |  Power             |
|  DVD Menu               |  D.Menu / Top      |
|  1                      |  1                 |
|  2                      |  2                 |
|  3                      |  3                 |
|  Audio Menu / Audio L/R |  Audio / Lang I/II |
|  4                      |  4                 |
|  5                     |  5                |
|  6                    |  6               |
|  Subtitle Menu /      |  Subtitle / EQ   |
|  7                    |  7               |
|  8                    |  8               |
|  9                    |  9               |
|  Return / Title       |  Back / Return   |

| Original   | Replacement  |
|--|--|
|  Return / Title |  Shift + Sound / Title  |
|  Clear          |  Exit / Cancel / Clear  |
|  0              |  0                      |
|  Display        |  Display / Media        |
|  Angle          |  Info / Angle           |
|  Stereo /       |  Fav / Marker / PC      |
|  Bass           |  Picture / Format       |
|  Sound          |  Sound / Title          |
|  Auto Mem /     |  Red / Netflix / Search |
|  Band / Digest  |  Smart / List           |
|  Volume-       |  Vol-                  |
|  Volume+      |  Vol+                 |
|  Zoom         |  Zoom / Size          |
|  Up           |  Up                   |
|  Mute         |  Mute / Dimmer        |
|  Left         |  Left                 |
|  Right        |  Right                |



